


TMU-LB-38 ATTACHMENT INSTRUCTIONS

Step 1

Carefully trim the protective Tygon sleeve to desired circumference, allowing for an appropriate fit around the animal's neck.

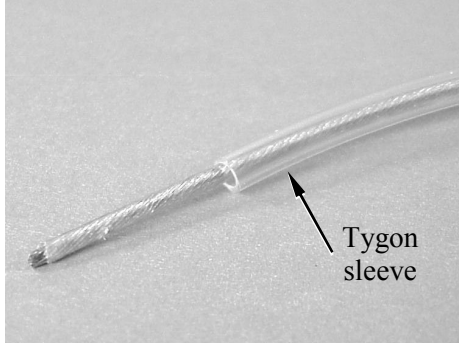


Step 2

Feed cable around the animal's neck and back through the open eyelet ensuring that the smooth surface of the transmitter will sit against the animal. Slide the brass ferrule onto the cable and up against the eyelet as shown. The end marked with a black ring is flared slightly to ease installation. If needed, isopropyl alcohol may be used as a lubricant.



Step 3

Using the provided crimp tool, crimp the ferrule to the cable ensuring the ferrule is against the eyelet.

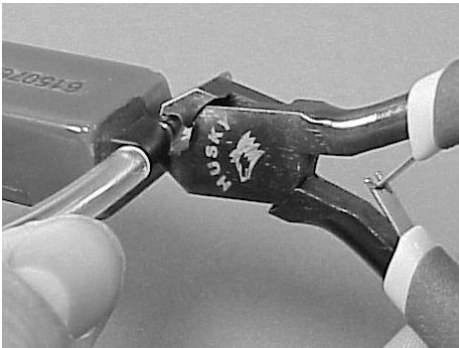


Step 4

Using provided cable cutter tool, trim off excess cable leaving approx. 1/8" beyond the ferrule.



Complete

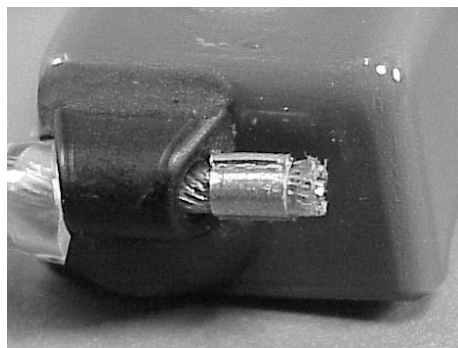

TELONICS

932 E. IMPALA AVENUE • MESA, ARIZONA 85204-6699 U.S.A.
TEL (480) 892-4444 • FAX (480) 892-9139
www.telonics.com

Aug 12, 2008
PB008308 Rev B